

 



 

 

 

 

 




 


 


 



 
 
 

 








 
 





 







 



 











| Original  |          | Replacement   |                   | Original  |       | Replacement   |                   |
|---|----------|---|-------------------|---|-------|---|-------------------|
|    | Power    |    | Power             |    | 7     |    | 7                 |
|    | Mute     |    | Mute / Dimmer     |    | 8     |    | 8                 |
|    | Audio    |    | Audio / Lang I/II |    | 9     |    | 9                 |
|    | TV / STB |    | AV / Input / RDS  |    | 0     |    | 0                 |
|    | TV / R   |    | TV/Radio /        |    | SAT   |  +  | Shift + 0         |
|    | Sleep    |    | Sleep / Timer     |    | EPG   |    | Guide / EPG / -/- |
|    | SUB      |    | Subtitle / EQ     |    | Fav   |    | Fav / Marker / PC |
|    | TXT      |    | Text / Goto       |    | PGUP  |    | CH+ / Page+       |
|    | Multi    |    | Display / Media   |    | PGDN  |    | CH- / Page-       |
|    | P / N    |   | Picture / Format  |    | Up    |    | Up                |
|  | Recall   |  | Back / Return     |  | Right |    | Right             |
|  | 1        |  | 1                 |  | FAV + |    | Vol+              |
|  | 2        |  | 2                 |  | FAV - |    | Vol-              |
|  | 3        |  | 3                 |  | Down  |    | Down              |
|  | 4        |  | 4                 |  | Left  |    | Left              |
|  | 5        |  | 5                 |  | OK    |    | OK                |
|  | 6        |  | 6                 |  | Menu  |    | Menu / Home       |





| Original  | Replacement                 |
|---|-----------------------------|
|    | Exit / Cancel / Clear       |
|    | Red / Netflix / Search      |
|    | Green / APP / Repeat        |
|    | Yellow / YouTube / Repeat   |
|    | Blue / Prime Video / Random |
|    | Pause / Step / Freeze       |
|    | Zoom / Size                 |
|    | D.Menu / Top                |
|    | Info / Angle                |
|   | Shift + 8                   |
|  | Shift + Yellow / YouTube /  |
|  | Shift + Text /              |
|  | Shift + 1                   |
|  | Shift + 2                   |
|  | Eject / Surround            |
|  | Stop / Hold                 |
|  | Rec / Rec Mode              |

| Original  | Replacement         |
|---|---------------------|
|  | Sound / Title       |
|  | << / Tune-          |
|  | >> / Tune+          |
|  | Smart / List        |
|  | Play / Slow         |
|  | I<< / Preset-       |
|  | >I< / Setup / OPT / |
|  | >>I / Preset+       |

