










 

 
 









Original	Replacement
 Standby/On	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4 / << Shuttle	 4
 5	 5
 6 / Shuttle >>	 6
 7	 7
 8	 8
 9	 9
 0 / Screen Fit	 0
 Audio	 Dual
 Mode/Repeat	 Text
 Zoom/SVHS	 Shift + Eject
 3D Sound	 3D
 Clear	 Exit

Original	Replacement
 TV/VCR	 TV/R
 Clock/Counter	 Options
 Angle/A.TRK	 Pre Ch
 View→DVD	 Media
 View→VCR	 Smart
 Input Sel	 AV
 Digest/F.ADV/Step	 Format
 TRK Up	 Vol +
 TRK Down	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Display	 Info
 <<	 <<
 I<<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause





Original	Replacement	Original	Replacement
>>	>>		
>>	>>		
Rec	Rec		
Disc Menu	D. Menu		
Up	Up		
Down	Down		
Right	Right		
Left	Left		
Setup/Enter	Ok		
Return/A.DUB	Back		
Title/Speed	Guide		
Subtitle/Timer	Subt		
Mark/Index	List		

