


 















































Original	Replacement	Original	Replacement
 Power	 Power	 CD Stop	 Stop / Hold
 P.Scan	 TV/Radio /	 CD Repeat A-B	 Yellow / YouTube / Repeat
 1	 1	 CD Intro	 Subtitle / EQ
 2	 2	 Deck Sel A	 Shift + CH+ /
 3	 3	 Deck Play	 Shift + Play /
 4	 4	 Deck >>	 Shift + >> /
 5	 5	 Deck Pause	 Shift + Pause / Step /
 6	 6	 Deck Sel B	 Shift + CH- /
 7	 7	 Deck Rec	 Shift + Rec / Rec Mode
 8	 8	 Deck Play	 Shift + I<< / Preset-
 9	 9	 Deck <<	 Shift + << /
 0	 0	 Deck Stop	 Shift + Stop /
 CD Disc	 Eject / Surround	 Equalizer Preset	 Up
 CD Play	 Play / Slow	 Equalizer User	 Right
 CD Pause	 Pause / Step / Freeze	 Equalizer File	 Down
 CD I<<	 I<< / Preset-	 Equalizer T.Mon	 Left
 CD >>I	 >>I / Preset+	 Equalizer Display	 OK





Original	Replacement	Original	Replacement
Input Selector CD	Shift + 3	Master Down	Vol-
Input Selector Tuner	Shift + 6	Display Sys	Display / Media
Input Selector Video 1	Shift + 4	Sleep	Sleep / Timer
Input Selector	Shift + 7	CH Level Down	CH- / Page-
Input Selector Tape Mon.	Shift + 5	Mute	Mute / Dimmer
Input Selector Video 2	Shift + 8		
Stereo	Audio / Lang I/II		
Input Selector 6 CH Direct	Shift + 1		
Input Selector Video 3	Shift + 9		
Auto	Smart / List		
DSP Mode	Menu / Home		
T.Tone	Text / Goto		
CH Level Up	CH+ / Page+		
CH Sel.	Info / Angle		
Master Up	Vol+		
D.Time	D.Menu / Top		
Adjust	Setup / OPT /		

