 

 






 





 





 




 




 













 





 

 

 
 


 

 





 




 




 













 


 






 




Original	Replacement	Original	Replacement
 Power	 Power	 Quick-Find	 AV
 Eject	 Eject	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Play	 Play
 5	 5	 Stop	 Stop
 6	 6	 Pause	 Pause
 7	 7	 <<	 <<
 8	 8	 >>	 >>
 9	 9	 Prog Up	 Ch +
 0	 0	 Prog Down	 Ch -
 +10/Daily/Weekly	 GUIDE	 Time Search	 Options
 C.Reset	 EXIT	 Index Search	 TV/R
 Timer	 Shift + AV	 Rec	 Rec
 Menu	 MENU	 Speed	 Media
 ShowView	 SMART	 I> Slow	 3D





Original	Replacement
 Power	 Power
 Open/Close	 Eject
 Search Mode	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Clear	 Exit
 Surround	 3D
 Display	 Info

Original	Replacement
 Audio	 Dual
 Repeat	 Text
 Menu	 Menu
 Top Menu	 Shift + Menu
 Angle	 Red
 A-B Repeat	 Green
 Mode	 Yellow
 Zoom	 Shift + Eject
 Return	 Back
 Setup	 Options
 Disc Navigator	 List
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 I<< Skip	 I<<





Original		Replacement		Original	Replacement
	Skip >>		>>		
	Play		Play		
	Stop		Stop		
	Pause		Pause		
	<<<		<<<		
	>>>		>>>		
	Subtitle		Subt		

