


 


 







 

 

 



 

 


 

 

 

 

 





Original	Replacement
 Power	 Power
Home	 Shift + Menu /
 e/Energy/Savin	 Sleep / Timer
 Input	 AV / Input / RDS
 AV Mode	 Shift + AV / Input / RDS
 TV/RAD	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Original	Replacement
 Vol+	 Vol+
 Q.View	 Display / Media
 FAV/Mark	 Fav / Marker / PC
 Vol-	 Vol-
 Ratio	 Picture / Format
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Home	 Menu / Home
 P + / Page +	 CH+ / Page+
 Q.Menu	 D.Menu / Top
 P - / Page -	 CH- / Page-
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK
 Back	 Back / Return





Original	Replacement
Info	Info / Angle
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text	Text / Goto
Subtitle	Subtitle / EQ
Stop	Stop / Hold
Play	Play / Slow
T.Opt	Setup / OPT /
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
AD	Audio / Lang I/II

Original	Replacement

