



Original	Replacement
Standby	Power
Sub-T	Subtitle / EQ
TTX	Text / Goto
Mute	Mute / Dimmer
EPG	Guide / EPG / -/--
GOTO	Shift + Text /
Page +	CH+ / Page+
Audio	Audio / Lang I/II
Repeat	Shift + 0
Page -	CH- / Page-
Menu	Menu / Home
Up / CH +	Up
Up / CH +	Shift + Up
Exit	Exit / Cancel / Clear
Left / Vol -	Shift + Left
Left / Vol -	Left
OK	OK

Original	Replacement
Right / Vol +	Shift + Right
Right / Vol +	Right
FAV	Fav / Marker / PC
Down / CH -	Shift + Down
Down / CH -	Down
TV / Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Info	Info / Angle
7	7
8	8
9	9






 
Original	Replacement
0	0
<< Rev	<< / Tune-
>> Fwd	>> / Tune+
I<< Prev	I<< / Preset-
>>I Next	>>I / Preset+
Play	Play / Slow
Pause / Timeshift	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Red / PVR	Red / Netflix / Search
Green / V-Format	+  Shift + Green / APP /
Green / V-Format	Green / APP / Repeat
Yellow / Aspect	+  Shift + Yellow / YouTube /
Yellow / Aspect	Yellow / YouTube / Repeat
Blue / Timer	Blue / Prime Video / Random
Blue / Timer	+  Shift + Blue / Prime

Original	Replacement



 





 



 


 
 

 

 



 

 

 

 
 


Original	Replacement
 Power	 Power
 SUB-T	 Subtitle / EQ
 TTX	 Text / Goto
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Goto	 Shift + Text /
 Page+	 CH+ / Page+
 Lang	 Audio / Lang I/II
 Repeat	 Shift + Green / APP /
 Page-	 CH- / Page-
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right

Original	Replacement
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Down/CH-	 Down
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Info	 Info / Angle
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-





Original	Replacement
 >>	 >> / Tune+
  <<	  << / Preset-
 >>	 >>  / Preset+
	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Setup / OPT /
	 Green / APP / Repeat
	 Picture / Format
	 Yellow / YouTube / Repeat
	 AV / Input / RDS
	 Blue / Prime Video / Random
	 Sleep / Timer

Original	Replacement

