



 
 













 



 

 

 

 



 






Original	Replacement
 Power	 Power
 Open/Close	 Eject
 USB	 Blue
 CD	 Yellow
 Tuner	 Green
 AUX	 Red
 Vol-	 Vol -
 Vol+	 Vol +
 I<<	 I<<
 >>I	 >>I
 Album/Preset	 Ch -
 Album/Preset	 Ch +
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 Program	 +  Shift + Sleep
 Clock/Display	 Info

Original	Replacement
 Timer	 AV
 Sleep	 Sleep
 DBB	 Dual
 DSC	 Subt
 RDS/News	 TV/R
 Mute	 Mute
 Repeat	 Text
 Shuffle	 Format





Original	Replacement	Original	Replacement
	Power		Power
	Open/Close		Eject
	USB		Blue
	CD		Yellow
	Tuner		Green
	AUX		Red
	Vol-		Vol -
	Vol+		Vol +
	I<<		I<<
	>>I		>>I
	Album/Preset		Ch -
	Album/Preset		Ch +
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Program	+	Shift + Sleep
	Clock/Display		Info
	Timer		AV
	Sleep		Sleep
	DBB		Dual
	DSC		Subt
	RDS/News		TV/R
	Mute		Mute
	Repeat		Text
	Shuffle		Format




 

 

 








 






 
 
 

 




Original	Replacement	Original	Replacement
	Power		DBB
	Open/Close		Dual
	USB		Subt
	CD		TV/R
	Tuner		Mute
	AUX		
	Vol-		
	Vol+		
	I<<		
	>>I		
	Album/Preset		
	Album/Preset		
	Stop		
	Program		
	Clock/Display		
	Timer		
	Sleep		
	Eject		
	Blue		
	Yellow		
	Green		
	Red		
	Vol -		
	Vol +		
	I<<		
	>>I		
	Ch -		
	Ch +		
	Stop		
	Shift + Sleep		
	Info		
	AV		
	Sleep		





	Original	Replacement	Original	Replacement
	USB	 D		
	CD	 C		
	Tuner	 B		
	AUX	 A		
	Open/Close	 ZOOM		
	Power			
	Vol+	 + VOL		
	Vol-	 - VOL		
	Clock/Display	 DISPLAY INFO		
	Timer	 TIMER AV		
	Sleep	 PROG SLEEP		
	DBB	 SOUND DUAL		
	DSC	 AD SUBT		
	RDS/News	 SEARCH TV/R		
	Mute	 MUTE		

