






 

 


 

 






 
 

 

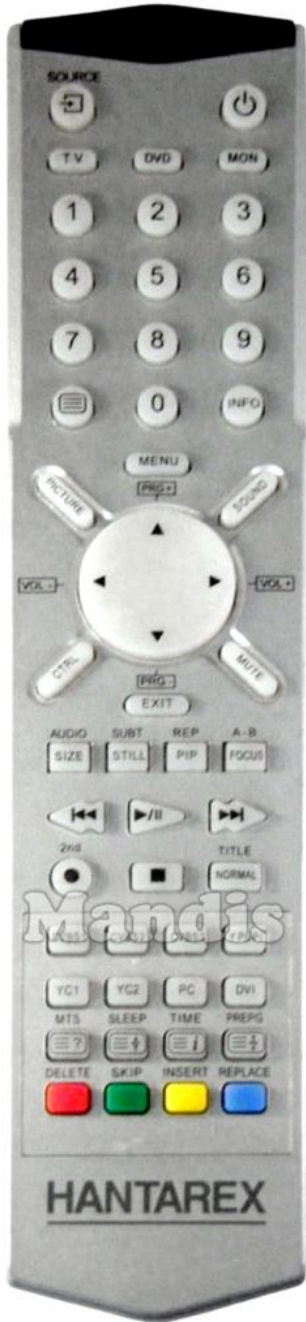 





 
 
 
 
Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Info	 Info / Angle
 Picture	 Picture / Format
 Menu	 Menu / Home

Original	Replacement
 Sound	 Sound / Title
 Up / Prog +	 Shift + Up
 Up / Prog +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Shift + Left
 Right / Vol +	 Shift + Right
 Right / Vol +	 Right
 CTRL	 D.Menu / Top
 Down / Prog -	 Down
 Down / Prog -	 Shift + Down
 Mute	 Mute / Dimmer
 Exit	 Exit / Cancel / Clear
 Size / Audio	 Zoom / Size
 Still / Subt	 Subtitle / EQ
 PIP / Rep	 Back / Return
 Focus / A-B	 Shift + Yellow / YouTube / Repeat A-B
 Normal / Title	 Shift + Sound / Title

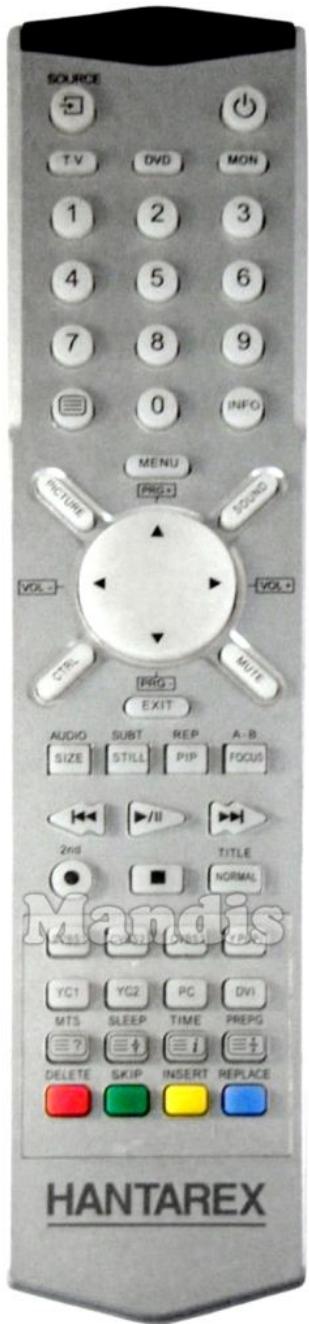 








 

 

 
 





 

















 

 




 






 


Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Info	 Info / Angle
 Picture	 Picture / Format
 Menu	 Menu / Home

Original	Replacement
 Sound	 Sound / Title
 Up / Prog +	 Up
 Up / Prog +	 Shift + Up
 Left / Vol -	 Shift + Left
 Left / Vol -	 Left
 Right / Vol +	 Right
 Right / Vol +	 Shift + Right
 CTRL	 D.Menu / Top
 Down / Prog -	 Down
 Down / Prog -	 Shift + Down
 Exit	 Exit / Cancel / Clear
 Size / Audio	 Zoom / Size
 Still / Subt	 Subtitle / EQ
 PIP / Rep	 Back / Return
 Focus / A-B	 Shift + Yellow / YouTube /
 << / I<<	 << / Tune-
 Play / Pause	 Play / Slow





Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Info	 Info / Angle
 Picture	 Picture / Format
 Menu	 Menu / Home

Original	Replacement
 Sound	 Sound / Title
 Up / Prog +	 Up
 Up / Prog +	 Shift + Up
 Left / Vol -	 Shift + Left
 Left / Vol -	 Left
 Right / Vol +	 Shift + Right
 Right / Vol +	 Right
 CTRL	 D.Menu / Top
 Down / Prog -	 Shift + Down
 Down / Prog -	 Down
 Mute	 Mute / Dimmer
 Exit	 Exit / Cancel / Clear
 Size / Audio	 Zoom / Size
 Still / Subt	 Subtitle / EQ
 PIP / Rep	 Back / Return
 Focus / A-B	 Shift + Yellow / YouTube /
 Rec / 2nd	 Rec / Rec Mode



