
 
 


 




 



 

 
 








 
 


 
 




 
 


 
 





 
 








 


 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		Yellow		Yellow
	1		1		EPG		Guide
	2		2		Tv/AV		AV
	3		3		Text		Text
	4		4		FAV+/P+		Ch +
	5		5		FAV-/P-		Ch -
	6		6		Info		Info
	7		7		Up/CH+		Up
	8		8		Down/CH-		Down
	9		9		Right		Right
	0/Multivideo		0		Left		Left
	Tv/Radio		TV/R		OK		Ok
	Mute		Mute		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Blue		Blue		Menu		Menu
	Green		Green		Exit		Exit
	Red		Red		A/B		Smart





	Original	Replacement	Original	Replacement
	USB	 Media		
	Rec	 Rec		
	Play	 Play		
	Pause/PP	 Pause		
	<<	 <<		
	>>	 >>		
	I<<	 I<<		
	>>I	 >>I		
	Stop	 Stop		
	FAV	 Pre Ch		
	Recall	 Back		

