
 


 



 
 




 


 


















Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Exit		Exit / Cancel / Clear
	6		6		Down		Down
	7		7		Display		Display / Media
	8		8		FAV		Fav / Marker / PC
	9		9		Vol+		Vol+
	0		0		FAV+		Shift + Yellow / YouTube /
	-/--		Shift + Guide / EPG / -/--		CH+		CH+ / Page+
	Recall		Back / Return		Vol-		Vol-
	P.Mode		Picture / Format		Repeat/FAV-		Shift + Green / APP /
	S.Mode		Sound / Title		CH-		CH- / Page-
	Auto		Eject / Surround		Text		Text / Goto



