





 
 

 

 



 



 



 













 



 

 



 



 



 
















Original		Replacement		Original		Replacement	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Display		Info
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Mute		Mute
	Recall		Back		Guide		Guide
	FAV		Pre Ch		Media		Media
	P.Mode		Format		CH+		Ch +
	S.Mode		Shift + Dual		CH-		Ch -
	Sleep		Sleep		Rec		Rec





Original		Replacement		Original		Replacement	
	T.Shift		Options		Green		Green
	I/II/Audio		Dual		Yellow		Yellow
	Size/Aspect		3D		Blue		Blue
	Text		Text				
	Reveal		Smart				
	Hold		D. Menu				
	Subpage		Eject				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I/Mix		>>I				
	Index/Reclist		List				
	Subtitle		Subt				
	Red		Red				

