
 




 





 






 



 











 

















Original	Replacement	Original	Replacement
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Vol-	 Vol-	 7	 7
 Left	 Left	 8	 8
 OK	 OK	 9	 9





 



 





 



 







 



 





 





 











 

















Original	Replacement
	+ Shift + 8

Original	Replacement





Original	Replacement	Original	Replacement
 Standby	 Power	 Right / Vol+	 Vol+
 Info	 Info / Angle	 Right / Vol+	 Right
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Down / CH-	 Down
 I<<	 I<< / Preset-	 Down / CH-	 CH- / Page-
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up / CH+	 CH+ / Page+	 5	 5
 Up / CH+	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left / Vol-	 Vol-	 7	 7
 Left / Vol-	 Left	 8	 8
 OK	 OK	 9	 9





Original	Replacement	Original	Replacement
0	0	HDMI - BAT	0
MEDIA	Media	MEDIA DISPLAY	Display / Media
USB	USB	SHIFT + USB 8	Shift + 8
TV/RADIO	TV / Radio	PROGRAM TV/RADIO	TV/Radio /
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
TTX	TTX	GOTO TEXT	Text / Goto
TIMER	Timer	TIMER SLEEP	Sleep / Timer
FAV	Fav	PC FAV MARKER	Fav / Marker / PC
RES	Res.	LIST SMART	Smart / List
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

