

























 




 




























 











Original	Replacement	Original	Replacement
	Power		Func
	Mute		A / V+
	1		EPG
	2		Option
	3		Vol -
	4		Vol +
	5		IPTV
	6		FAV / SAT
	7		Green
	8		Yellow
	9		Red
	Info		Blue
	0		Up
	Recall		Left
	TV / Radio		OK
	Sub.T / TXT		Right
	Sub.T / TXT		Menu
	Power		D.Menu / Top
	Mute / Dimmer		AV / Input / RDS
	1		Guide / EPG / -/--
	2		Setup / OPT /
	3		Vol-
	4		Vol+
	5		Sound / Title
	6		Fav / Marker / PC
	7		Green / APP / Repeat
	8		Yellow / YouTube / Repeat
	9		Red / Netflix / Search
	Info / Angle		Blue / Prime Video / Random
	0		Up
	Back / Return		Left
	TV/Radio /		OK
	Subtitle / EQ		Right
	Text / Goto		Menu / Home





Original	Replacement	Original	Replacement
	Down		Down
	Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	PVR List		Smart / List
	PVR Info		Display / Media
	T.Shift		Eject / Surround
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Jump		Picture / Format
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

