













 





 











 

























 







 





Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Tv/Fav/Radio	 TV/Radio /
 Power	 Power	 Up	 Up
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 P +	 CH+ / Page+
 7	 7	 P -	 CH- / Page-
 8	 8	 Vol-	 Vol-
 9	 9	 Vol+	 Vol+
 Recall	 Back / Return	 Aspect	 Picture / Format
 0	 0	 →  [ / ]  ←	 Zoom / Size
 Source	 AV / Input / RDS	 Index / [i+]	 Info / Angle
 Menu	 Menu / Home	 Text / Mix	 Text / Goto
 Guide	 Guide / EPG / -/--	 [▼]	 Smart / List
 Tv/Fav/Radio	 Fav / Marker / PC	 Dual I/II	 Audio / Lang I/II



