



| Original  | Replacement | Original  | Replacement              |
|---|-------------|---|--------------------------|
|      | Power       |      | Power                    |
|      | Mute        |      | Mute / Dimmer            |
|      | 1           |      | 1                        |
|      | 2           |      | 2                        |
|      | 3           |      | 3                        |
|      | 4           |      | 4                        |
|      | 5           |      | 5                        |
|      | 6           |      | 6                        |
|      | 7           |      | 7                        |
|     | 8           |     | 8                        |
|    | 9           |    | 9                        |
|    | List        |    | Smart / List             |
|    | 0           |    | 0                        |
|    | Recall      |    | Back / Return            |
|    | P.Mode      |    | Picture / Format         |
|    | S.Mode      |    | Sound / Title            |
|    | Sleep       |    | Sleep / Timer            |
|    | Vol +       |    | Vol+                     |
|    | MTS         |    | Info / Angle             |
|    | CH +        |    | CH+ / Page+              |
|    | Vol -       |    | Vol-                     |
|    | Aspect      |    | Shift + Picture / Format |
|    | CH -        |    | CH- / Page-              |
|    | Guide       |    | Guide / EPG / -/-        |
|    | Home        |    | Shift + Menu /           |
|    | Rec         |    | Rec / Rec Mode           |
|   | Menu        |   | Menu / Home              |
|  | Up          |  | Up                       |
|  | Source      |  | AV / Input / RDS         |
|  | Left        |  | Left                     |
|  | Enter       |  | OK                       |
|  | Right       |  | Right                    |
|  | Exit        |  | Exit / Cancel / Clear    |
|  | Down        |  | Down                     |





| Original  |              | Replacement   |                               | Original  |                | Replacement   |                   |
|---|--------------|---|-------------------------------|---|----------------|---|-------------------|
|    | Display      |    | Display / Media               |  | FAV            |  | Fav / Marker / PC |
|    | Red          |    | Red / Netflix / Search        |  | Size / Mouse   |  | Zoom / Size       |
|    | Green        |    | Green / APP / Repeat          |  | Hold / Refresh |  | Shift + Stop /    |
|    | Yellow       |    | Yellow / YouTube / Repeat     |   |                |   |                   |
|    | Blue         |    | Blue / Prime Video / Random   |   |                |   |                   |
|    | << / Index   |    | << / Tune-                    |   |                |   |                   |
|    | Play/Pause / |    | Pause / Step / Freeze         |   |                |   |                   |
|    | Play/Pause / |    | Shift + Exit / Cancel / Clear |   |                |   |                   |
|    | Play/Pause / |    | Play / Slow                   |   |                |   |                   |
|    | >> / TTX     |    | >> / Tune+                    |   |                |   |                   |
|   | >> / TTX     |   | Text / Goto                   |   |                |   |                   |
|  | I<< / SUB.PG |  | I<< / Preset-                 |   |                |   |                   |
|  | >>I / Reveal |  | >>I / Preset+                 |   |                |   |                   |
|  | Stop / Mix   |  | Stop / Hold                   |   |                |   |                   |
|  | CAP          |  | D.Menu / Top                  |   |                |   |                   |
|  | Subtitle     |  | Subtitle / EQ                 |   |                |   |                   |
|  | TV / Radio   |  | TV/Radio /                    |   |                |   |                   |

