

 

 

 

 



 



 



 










 
 







 



 

 

 

 



 



 













Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Info / Angle
	CH +		CH+ / Page+
	Vol -		Vol-
	Aspect		Shift + Picture / Format
	CH -		CH- / Page-
	Guide		Guide / EPG / -/-
	Home		Shift + Menu /
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original		Replacement		Original		Replacement	
	Display		Display / Media		FAV		Fav / Marker / PC
	Red		Red / Netflix / Search		Size / Mouse		Zoom / Size
	Green		Green / APP / Repeat		Hold / Refresh		Shift + Stop /
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	<< / Index		<< / Tune-				
	Play/Pause /		Pause / Step / Freeze				
	Play/Pause /		Shift + Exit / Cancel / Clear				
	Play/Pause /		Play / Slow				
	>> / TTX		>> / Tune+				
	>> / TTX		Text / Goto				
	I<< / SUB.PG		I<< / Preset-				
	>>I / Reveal		>>I / Preset+				
	Stop / Mix		Stop / Hold				
	CAP		D.Menu / Top				
	Subtitle		Subtitle / EQ				
	TV / Radio		TV/Radio /				



Program