 

 



 





























 



 



 

 

 

 







 

 





 



 



















Original	Replacement	Original	Replacement
 PowerTv	 Power	 ← Time Shift	 I<< / Preset-
 NET	 Shift + Fav / Marker / PC	 Pause Time Shift	 Pause / Step / Freeze
 [i+]	 Info / Angle	 → Time Shift	 >>I / Preset+
 P.Info	 Shift + Info / Angle	 1	 1
 ATV	 Shift + 1	 2	 2
 DTV	 Shift + 2	 3	 3
 SAT	 Shift + 0	 4	 4
 Radio	 TV/Radio /	 5	 5
 Power Source	 Shift + Power	 6	 6
 << Source	 << / Tune-	 7	 7
 Play Source	 Play / Slow	 8	 8
 >> Source	 >> / Tune+	 9	 9
 Control	 Smart / List	 Recall	 Fav / Marker / PC
 Rec Source	 Rec / Rec Mode	 0	 0
 Rec Stop	 Shift + Stop /	 Source	 AV / Input / RDS
 Stop Source	 Stop / Hold	 I/II/I+II/▼/O	 Audio / Lang I/II
 Ready Time Shift	 Sound / Title	 [<>]	 Picture / Format





Original	Replacement	Original	Replacement
 AV Mode	 Setup / OPT /	 Back	 Back / Return
 Eco	 D.Menu / Top	 [...]	 Subtitle / EQ
 Mute	 Mute / Dimmer	 [=?]	 Eject / Surround
 Vol+	 Vol+	 [=o]	 Sleep / Timer
 P+	 CH+ / Page+	 [=+]	 Display / Media
 [=]	 Text / Goto	 Red	 Red / Netflix / Search
 Vol-	 Vol-	 Green	 Green / APP / Repeat
 P-	 CH- / Page-	 Yellow	 Yellow / YouTube / Repeat
 3D	 Zoom / Size	 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home		
 EPG	 Guide / EPG / -/--		
 Up	 Up		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 End	 Exit / Cancel / Clear		
 Down	 Down		

Original	Replacement	Original	Replacement
 Back	 Back / Return	 [...]	 Subtitle / EQ
 [=?]	 Eject / Surround	 [=o]	 Sleep / Timer
 [=+]	 Display / Media	 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random		

