 




 


 




 












 


 







Original	Replacement
 Power	 Power
 Mute	 Mute
 Aspect	 Format
 Sound	 Shift + Dual
 Picture	 Shift + Format
 EPG	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List

Original	Replacement
 Recall	 Pre Ch
 Sub	 Subt
 Text	 Text
 Mix	 Shift + Text
 Size	 Eject
 Hold	 Shift + Stop
 Reveal	 Options
 Sub.Page	 Shift + Subt
 Index	 Shift + Info
 Info	 Info
 FAV	 Shift + Pre Ch
 Menu	 Menu
 Input	 AV
 Audio	 Dual
 Up	 Up
 Right	 Right
 Down	 Down





Original		Replacement		Original		Replacement	
	Left		Left		>>		>>
	OK		Ok		<<		<<
	Back		Back		>>		>>
	Exit		Exit		Red		Red
	Vol +		Vol +		Green		Green
	Vol -		Vol -		Yellow		Yellow
	Sleep		Sleep		Blue		Blue
	Prog	 + 	Shift + Sleep				
	CH +		Ch +				
	CH -		Ch -				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Source HDMI		Media				
	TV / R		TV/R				
	Source DTV		Smart				
	<<		<<				

