




































 





 


















| Original   | Replacement  | Original   | Replacement   |
|--|--|--|---|
|  Standby      |  Power                      |  Display  |  Display / Media           |
|  Eject        |  Eject / Surround           |  Tv/Radio |  TV/Radio /                |
|  1            |  1                          |  Up       |  Up                        |
|  2            |  2                          |  Left     |  Left                      |
|  3            |  3                          |  OK       |  OK                        |
|  4            |  4                          |  Right    |  Right                     |
|  5            |  5                          |  Down     |  Down                      |
|  6            |  6                          |  Exit     |  Exit / Cancel / Clear     |
|  7            |  7                          |  Menu     |  Menu / Home               |
|  8            |  8                          |  FAV      |  Shift + Fav / Marker / PC |
|  9           |  9                         |  Vol+    |  Vol+                     |
|  Aspect     |  Shift + Picture / Format |  Rec    |  Rec / Rec Mode          |
|  0          |  0                        |  CH+    |  CH+ / Page+             |
|  Recall/+10 |  Fav / Marker / PC        |  Vol-   |  Vol-                    |
|  TVG        |  Guide / EPG / -/--       |  Mute   |  Mute / Dimmer           |
|  Subtitle   |  Subtitle / EQ            |  CH-    |  CH- / Page-             |
|  Audio      |  Audio / Lang I/II        |  Source |  AV / Input / RDS        |





| Original        | Replacement            |
|-----------------|------------------------|
| P.Mode          | Picture / Format       |
| S.Mode          | Sound / Title          |
| Sleep           | Sleep / Timer          |
| Title/Text      | Text / Goto            |
| D.Menu/Hold     | D.Menu / Top           |
| D.Setup/Reveal  | Setup / OPT /          |
| Subpage         | Smart / List           |
| Play            | Play / Slow            |
| Pause/Timeshift | Pause / Step / Freeze  |
| Stop            | Stop / Hold            |
| Index           | Info / Angle           |
| Zoom/Size       | Zoom / Size            |
| <<              | << / Tune-             |
| >>              | >> / Tune+             |
| I<<             | I<< / Preset-          |
| >>I             | >>I / Preset+          |
| Red/Goto        | Red / Netflix / Search |

| Original      | Replacement                 |
|---------------|-----------------------------|
| Green/Angle   | Green / APP / Repeat        |
| Yellow/Repeat | Yellow / YouTube / Repeat   |
| Blue/A-B      | Blue / Prime Video / Random |

