










Original	Replacement
	 Smart / List
	 Text / Goto
	 Display / Media
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Back / Return
	 Fav / Marker / PC

Original	Replacement
	 Subtitle / EQ
	 Info / Angle
	 Picture / Format
	 Vol+
	 Shift + CH+ /
	 CH+ / Page+
	 Vol-
	 Shift + CH- /
	 CH- / Page-
	 Audio / Lang I/II
	 Shift + Audio / Lang I/II
	 Sound / Title
	 Guide / EPG / -/-
	 Up
	 Left
	 OK
	 Right





Original	Replacement
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Timer	 Sleep / Timer
 Aspect	 Zoom / Size

Original	Replacement

