




| Original   | Replacement   |
|--|---|
|  Standby          |  Power               |
|  Mute             |  Mute / Dimmer       |
|  1                |  1                   |
|  2                |  2                   |
|  3                |  3                   |
|  4                |  4                   |
|  5                |  5                   |
|  6                |  6                   |
|  7                |  7                   |
|  8               |  8                  |
|  9              |  9                 |
|  i / Display    |  Display / Media   |
|  0              |  0                 |
|  Recall / Mouse |  Back / Return     |
|  TV / Radio     |  TV/Radio /        |
|  Audio          |  Audio / Lang I/II |
|  SUB-T          |  Subtitle / EQ     |

| Original  | Replacement  |
|---|--|
|  Source        |  AV / Input / RDS         |
|  www / Browser |  Smart / List             |
|  Up            |  Up                       |
|  Left          |  Left                     |
|  Enter         |  OK                       |
|  Right         |  Right                    |
|  Menu          |  Menu / Home              |
|  Down          |  Down                     |
|  Exit          |  Exit / Cancel / Clear    |
|  Vol +        |  Vol+                    |
|  Home        |  Shift + Menu /         |
|  CH +        |  CH+ / Page+            |
|  Setup       |  Setup / OPT /          |
|  CH -        |  CH- / Page-            |
|  Vol -       |  Vol-                   |
|  Refresh     |  Info / Angle           |
|  Red         |  Red / Netflix / Search |



