









Original	Replacement
	 Power
	 D.Menu / Top
	 Mute / Dimmer
	 Shift + 0
	 Display / Media
	 AV / Input / RDS
	 Zoom / Size
	 Sleep / Timer
	 1
	 2
	 3
	 Fav / Marker / PC
	 4
	 5
	 6
	 Pause / Step / Freeze
	 7

Original	Replacement
	 8
	 9
	 Shift + CH+ /
	 TV/Radio /
	 0
	 Back / Return
	 Shift + CH- /
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 Smart / List
	 OK
	 Right
	 Vol+
	 CH- / Page-
	 Down





Original	Replacement
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Info	Info / Angle
EPG	Guide / EPG / -/--
Red / Find	Red / Netflix / Search
Green / V-Format	Picture / Format
Green / V-Format	Green / APP / Repeat
Yellow / TXT	Text / Goto
Yellow / TXT	Yellow / YouTube / Repeat
Blue / Audio	Audio / Lang I/II
Blue / Audio	Blue / Prime Video / Random
Record	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold
Shift	Setup / OPT /
<< Fast	<< / Tune-
>> Fast	>> / Tune+

Original	Replacement
< Slow	I<< / Preset-
> Slow	>>I / Preset+

