

 

 

 

 

 

 

 
 
 

 
 

 

 

 

 

 



 
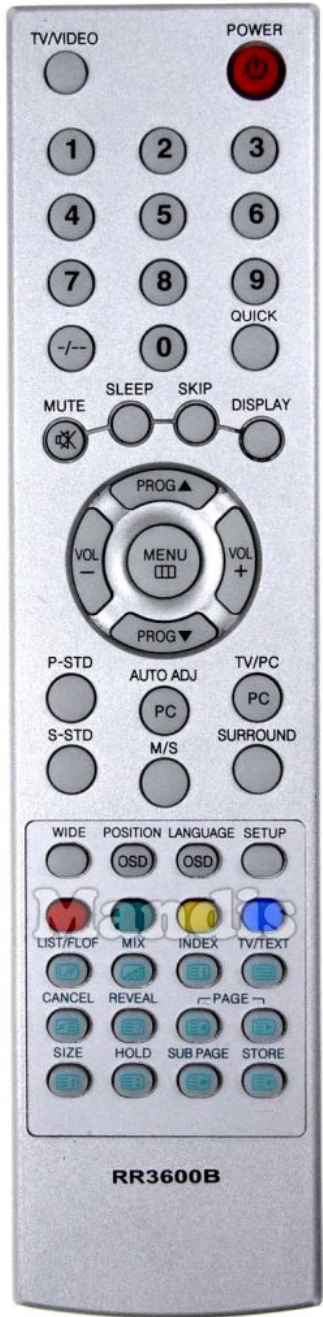 


Original	Replacement
 Power	 Power
 TV / Video	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 /--	 GUIDE
 Quick	 Pre Ch
 Mute	 Mute
 Sleep	 Sleep
 Skip	 Exit

Original	Replacement
 Display	 Info
 Up / Prog +	 Ch +
 Up / Prog +	 Up
 Down / Prog -	 Ch -
 Down / Prog -	 Down
 Right / Vol +	 Vol +
 Right / Vol +	 Right
 Left / Vol -	 Vol -
 Left / Vol -	 Left
 Menu	 Menu
 Menu	 Ok
 P-STD	 Shift + Format
 S-STD	 Dual
 PC Auto ADJ	 Smart
 PC / TV/PC	 Media
 M / S	 TV/R
 Surround	 Shift + Dual





Original	Replacement	Original	Replacement
Wide	Format	Size	Eject
OSD Position	3D	Hold	Stop
OSD Language	+ Shift + 3D	Store	+ Shift + Smart
Setup	Options		
Red	Red		
Green	Green		
List / FLOF	List		
Yellow	Yellow		
Blue	Blue		
Mix	+ Shift + Text		
Index	+ Shift + Info		
TV / Text	Text		
Cancel	Back		
Subpage	Subt		
Reveal	Play		
Page -	I<<		
Page +	>>I		

Original	Replacement	Original	Replacement
Size	Eject	Size	Eject
Hold	Stop	Hold	Stop
Store	+ Shift + Smart	Store	+ Shift + Smart

