

 

 

 

 

 

 

 
 
 

 
 

 

 

 

 

 



 
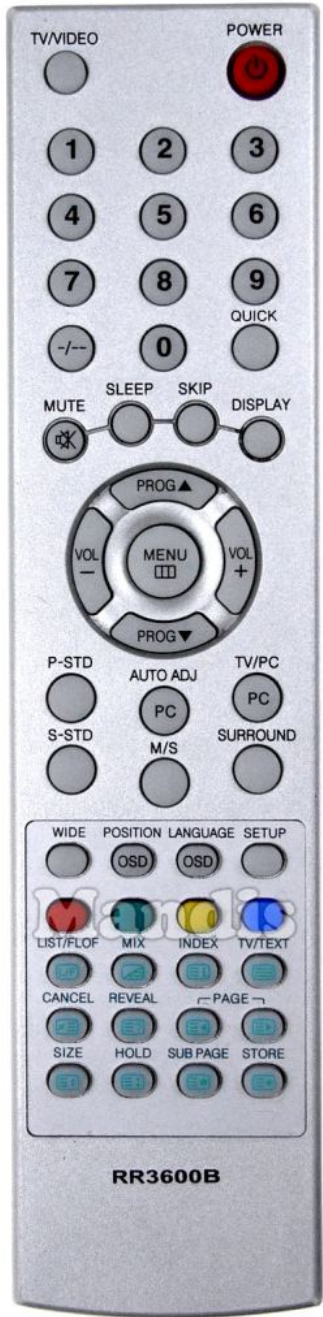 




Original	Replacement
 Power	 Power
 TV / Video	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 /--	 GUIDE
 Quick	 Pre Ch
 Mute	 Mute
 Sleep	 Sleep
 Skip	 Exit

Original	Replacement
 Display	 Info
 Up / Prog +	 Ch +
 Up / Prog +	 Up
 Down / Prog -	 Ch -
 Down / Prog -	 Down
 Right / Vol +	 Vol +
 Right / Vol +	 Right
 Left / Vol -	 Vol -
 Left / Vol -	 Left
 Menu	 Menu
 Menu	 Ok
 P-STD	 Shift + Format
 S-STD	 Dual
 PC Auto ADJ	 Smart
 PC / TV/PC	 Media
 M / S	 TV/R
 Surround	 Shift + Dual





Original		Replacement	
	Wide		Format
	OSD Position		3D
	OSD Language	+	Shift + 3D
	Setup		Options
	Red		Red
	Green		Green
	List / FLOF		List
	Yellow		Yellow
	Blue		Blue
	Mix	+	Shift + Text
	Index	+	Shift + Info
	TV / Text		Text
	Cancel		Back
	Subpage		Subt
	Reveal		Play
	Page -		I<<
	Page +		>>I

Original		Replacement	
	Size		Eject
	Hold		Stop
	Store	+	Shift + Smart

