




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		D. Menu
	Audio		Dual
	Open/Close		Eject
	Status		Subt
	Miracast		TV/R
	Internet		Shift + Smart
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Menu/Pop-Up		Menu
	X/Exit		Exit
	Option		Options
	Return		Back
	Top Menu		Shift + Menu
	Netflix		Media
	Home		Smart
	Up		Up
	Down		Down
	Right/I>		Right





Original	Replacement	Original	Replacement
 Left/<	 Left		
 OK	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Power Tv	 +  Shift + Power		
 AV Input Tv	 AV		
 Vol+ Tv	 Vol +		
 Vol- Tv	 Vol -		

