





















 







 









 









 

 




| Original  |        | Replacement  |                            | Original  |         | Replacement   |                       |
|---|--------|--|----------------------------|---|---------|---|-----------------------|
|    | Power  |     | Power                      |    | CH +    |    | CH+ / Page+           |
|    | Mute   |     | Mute / Dimmer              |    | Vol -   |    | Vol-                  |
|    | 1      |     | 1                          |    | Input   |    | AV / Input / RDS      |
|    | 2      |     | 2                          |    | CH -    |    | CH- / Page-           |
|    | 3      |     | 3                          |    | Up      |    | Up                    |
|    | 4      |     | 4                          |    | Left    |    | Left                  |
|    | 5      |     | 5                          |    | Enter   |    | OK                    |
|    | 6      |     | 6                          |    | Right   |    | Right                 |
|    | 7      |     | 7                          |    | Menu    |    | Menu / Home           |
|    | 8      |     | 8                          |    | Down    |    | Down                  |
|   | 9      |    | 9                          |   | Exit    |   | Exit / Cancel / Clear |
|  | -/--   |  | Shift + Guide / EPG / -/-- |  | Display |  | Display / Media       |
|  | 0      |   | 0                          |  | PMode   |  | Picture / Format      |
|  | Recall |   | Back / Return              |  | S.Mode  |  | Sound / Title         |
|  | Vol +  |   | Vol+                       |  | Sleep   |  | Sleep / Timer         |
|  | Aspect |  | Shift + Picture / Format   |  | FAV     |  | Fav / Marker / PC     |
|  | Nicam  |  | Audio / Lang I/II          |  | FAV -   |  | Shift + Down          |



