



Original	Replacement	Original	Replacement
 Power	 Power	 Up / CH +	 Ch +
 Mute	 Mute	 Down / CH -	 Down
 1	 1	 Down / CH -	 Ch -
 2	 2	 Right / Vol +	 Right
 3	 3	 Right / Vol +	 Vol +
 4	 4	 Left / Vol -	 Left
 5	 5	 Left / Vol -	 Vol -
 6	 6	 OK	 Ok
 7	 7	 PG +	 Shift + Ch +
 8	 8	 PG -	 Shift + Ch -
 9	 9	 TV / Radio	 TV/R
 0	 0	 SUB	 Subt
 Info	 Info	 TTX	 Text
 EPG	 Guide	 Audio	 Dual
 Menu	 Menu	 Last	 Back
 Exit	 Exit	 Mode	 Smart
 Up / CH +	 Up	 White / Favor	 Sleep





Original		Replacement	
FAVOR	White / Favor	FAV PRE-CH	Pre Ch
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue

Original		Replacement	

