


 
 
 

 

 

 
 

 
 












 


 
 
 

 
 
 
 
 
 
 


 
 







Original	Replacement	Original	Replacement
	POWER		Power
	TV		TV/R
	VCR / AUX		Shift + TV/R
	SLEEP		Sleep
	TV / AV		AV
	TUNER / BAND		Smart
	DVD / CD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≧10 / -/-		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	VOL +		Vol +
	VOL -		Vol -
	SKIP PREV.		I<<
	SKIP NEXT		>>I
	SLOW/SEARCH		<<
	SLOW/SEARCH		>>
	STOP		Stop
	PAUSE		Pause
	PLAY		Play
	TOP MENU / DIR. NAV.		D. Menu
	MENU / PLAY LIST		Menu
	UP		Up
	LEFT		Left





Original	Replacement
 ENTER	 Ok
 RIGHT	 Right
 DOWN	 Down
 DISPLAY / TV VOL-	 Info
 DISPLAY / TV VOL-	 Shift + Vol -
 RETURN / TV VOL+	 Shift + Vol +
 RETURN / TV VOL+	 Back
 SUBWOOFER LEVEL	 3D
 SFC	 Green
 SUPER SRND	 Shift + 1
 SUPER SRND	 Format
 DOLBY PL. II	 Dual
 DOLBY PL. II	 Shift + Subt
 C. S. M.	 Red
 POSITION MEMORY	 Pre Ch
 AUDIO	 Shift + Dual
 AUDIO	 Eject

Original	Replacement
 SETUP	 Options
 MUTING	 Mute
 FL DISPLAY	 Shift + Info
 PAGE	 Shift + 2
 GROUP	 Shift + 3
 REPEAT	 Text
 PLAY MODE	 Shift + Play
 TEST	 Yellow
 CH. SELECT	 List
 QUICK REPLA	 Blue
 SUBTITLE	 Subt







