


 




 
 
 
 

 
 

 



 
 
 









 




| Original | Replacement |
|--|---|
|  Power |  Power |
|  Picture |  Picture / Format |
|  Input Tv |  Shift + AV / Input / RDS |
|  Input AV |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Text |  Text / Goto |
|  STTL |  Subtitle / EQ |
|  APPS |  Fav / Marker / PC |
|  i |  Info / Angle |
|  Exit |  Exit / Cancel / Clear |
|  Home |  Shift + Menu / |
|  Netflix |  Shift + Red / Netflix / |
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  Guide |  Guide / EPG / -/-- |
|  OK |  OK |

| Original | Replacement |
|---|---|
|  Option |  Setup / OPT / |
|  Down |  Down |
|  Back/Return |  Back / Return |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |





Original

Replacement

| | | | |
|-------------------------------|-----------|-----------------------------------|-----------------------|
| 6 _{mno} | 6 | 6 _{TUNER} | 6 |
| 7 _{pqrs} | 7 | 7 _{AUX - HDD} | 7 |
| 8 _{tuv} | 8 | 8 _{USB} | 8 |
| 9 _{wxyz} | 9 | 9 _{BLUETOOTH} | 9 |
| ? _{eHELP} | ?/Help | SHIFT + ANGLE INFO | Shift + Info / Angle |
| 0 | 0 | 0 _{HDMI - BAT} | 0 |
| ↺ _{LAST VIEW} | Last View | SHIFT + RETURN BACK | Shift + Back / Return |
| ⏮ | << | TUNE- | << / Tune- |
| ▶ | Play | SLOW | Play / Slow |
| ⏭ | >> | TUNE+ | >> / Tune+ |
| ⏪ | I<< | PRESET- | I<< / Preset- |
| ⏸ | Pause | STEP - FREEZE | Pause / Step / Freeze |
| ⏩ | >> | PRESET+ | >> / Preset+ |
| MY APP | My APP | LIST SMART | Smart / List |
| ■ | Stop | HOLD | Stop / Hold |
| ⏺ | Rec | REC MODE | Rec / Rec Mode |

Original

Replacement

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

