 



 

 

 
 
 



 

 

 

 

 



 


 

 
 


 
 













 
 

 







 
 








| Original   | Replacement  | Original   | Replacement   |
|--|--|--|---|
|  Power            |  Power    |  Vol+             |  Vol +     |
|  Sleep            |  Sleep    |  Vol-             |  Vol -     |
|  CBL/Sat          |  1        |  Mute             |  Mute      |
|  Media Player     |  2        |  Info             |  Info      |
|  Blu-ray/DVD      |  3        |  Option           |  Options   |
|  Game             |  4        |  Back             |  Back      |
|  AUX              |  5        |  Setup            |  Menu      |
|  Tuner            |  6        |  Up               |  Up        |
|  iPod/USB         |  7        |  Down             |  Down      |
|  Tv Audio        |  8       |  Right           |  Right    |
|  CD             |  9      |  Left           |  Left    |
|  Online Music   |  Guide  |  Enter          |  Ok      |
|  Bluetooth      |  0      |  I<</Tune-      |  I<<     |
|  Internet Radio |  Pre Ch |  Play           |  Play    |
|  CH/Page+       |  Ch +   |  Pause          |  Pause   |
|  CH/Page-       |  Ch -   |  >>I/Tune+      |  >>I     |
|  Eco            |  3D     |  Smart Select 1 |  D. Menu |





| Original       | Replacement | Original | Replacement |
|----------------|-------------|----------|-------------|
| Smart Select 2 | Text        |          |             |
| Smart Select 3 | Eject       |          |             |
| Smart Select 4 | AV          |          |             |
| Green/Movie    | Green       |          |             |
| Red/Music      | Red         |          |             |
| Blue/Game      | Blue        |          |             |
| Yellow/Pure    | Yellow      |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |
|                |             |          |             |

