


 


 


 







Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 PG +	 >>I / Preset+
 DTV / VCR	 Smart / List
 Vol +	 Vol+
 PG -	 I<< / Preset-
 Info	 Info / Angle
 Vol -	 Vol-
 Menu	 Menu / Home
 Up / CH +	 CH+ / Page+
 Up / CH +	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Record	 Rec / Rec Mode
 Down / CH -	 CH- / Page-

Original	Replacement
 Down / CH -	 Down
 Timeshift	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 EPG	 Guide / EPG / -/--
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Audio / Lang I/II
 TV / Radio	 TV/Radio /
 FAV	 Fav / Marker / PC





	Original	Replacement	Original	Replacement
	File	Display / Media		
	TTX	Text / Goto		
	Subtitle	Subtitle / EQ		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Red / Stop	Red / Netflix / Search		
	Red / Stop	Stop / Hold		
	Green / Step	Green / APP / Repeat		
	Green / Step	Shift + Pause / Step / Step /		
	Yellow / Pause	Yellow / YouTube / Repeat		
	Yellow / Pause	Pause / Step / Freeze		
	Blue / Play	Blue / Prime Video / Random		
	Blue / Play	Play / Slow		

