









































 







 



 



 



 

 









 





 





























 



 



 



 



 



 









| Original | Replacement | Original | Replacement |
|--|--|--|--|
|  On |  Power |  SP A/B |  Sound / Title |
|  Standby |  Shift + Power |  Up |  Up |
|  V1 |  1 |  Muting |  Mute / Dimmer |
|  V2 |  4 |  Left |  Left |
|  V3 |  7 |  Enter |  OK |
|  Multi CH |  8 |  Right |  Right |
|  DVD |  2 |  Return |  Back / Return |
|  Tape |  5 |  Down |  Down |
|  Tuner |  6 |  Setup |  Setup / OPT / |
|  CD |  3 |  Pause |  Pause / Step / Freeze |
|  Tuner/Dimmer |  0 |  Play |  Play / Slow |
|  Tuner/Dimmer |  Shift + Mute / Dimmer |  Stop |  Stop / Hold |
|  Sleep |  Sleep / Timer |  << |  << / Tune- |
|  CH/Disc+ |  CH+ / Page+ |  >> |  >> / Tune+ |
|  Vol+ |  Vol+ |  I<< |  I<< / Preset- |
|  CH/Disc- |  CH- / Page- |  >>I |  >>I / Preset+ |
|  Vol- |  Vol- |  Stereo |  Red / Netflix / Search |





| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  On |  Power |  Up |  Up |
|  Standby |  Shift + Power |  Muting/Previous Menu |  Menu / Home |
|  1 |  1 |  Muting/Previous Menu |  Mute / Dimmer |
|  2 |  2 |  Left |  Left |
|  3 |  3 |  Enter |  OK |
|  4 |  4 |  Right |  Right |
|  5 |  5 |  Return |  Back / Return |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Setup |  Setup / OPT / |
|  8 |  8 |  Pause |  Pause / Step / Freeze |
|  9 |  9 |  Play |  Play / Slow |
|  +10 |  Guide / EPG / -/-- |  Stop |  Stop / Hold |
|  0 |  0 |  << |  << / Tune- |
|  CLR |  Exit / Cancel / Clear |  >> |  >> / Tune+ |
|  CH/Disc+ |  CH+ / Page+ |  I<< |  I<< / Preset- |
|  CH/Disc- |  CH- / Page- |  >>I |  >>I / Preset+ |
|  Top Menu |  D.Menu / Top |  Audio |  Audio / Lang I/II |





 


 


| Original | Replacement |
|----------------------|--------------------|
| On | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| CH/Disc+ | CH+ / Page+ |
| CH/Disc- | CH- / Page- |
| Guide | Guide / EPG / -/-- |
| Up | Up |
| Muting/Previous Menu | Menu / Home |
| Muting/Previous Menu | Mute / Dimmer |

| Original | Replacement |
|------------|-----------------------|
| Left | Left |
| Enter | OK |
| Right | Right |
| Down | Down |
| Setup | Setup / OPT / |
| Pause | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| << | << / Tune- |
| >> | >> / Tune+ |
| On CD | Shift + Power |
| Standby CD | Shift + Mute / Dimmer |
| 1 CD | Shift + 1 |
| 2 CD | Shift + 2 |
| 3 CD | Shift + 3 |
| 4 CD | Shift + 4 |
| 5 CD | Shift + 5 |










































 
 








| Original | Replacement |
|--|---|
|  6 CD |  +  Shift + 6 |
|  7 CD |  +  Shift + 7 |
|  8 CD |  +  Shift + 8 |
|  9 CD |  +  Shift + 9 |
|  +10 CD |  +  Shift + Guide / EPG / -/- |
|  0 CD |  +  Shift + 0 |
|  CLR CD |  +  Shift + Exit / Cancel / Clear |
|  CH/Disc + CD |  +  Shift + CH+ / |
|  CH/Disc- CD |  +  Shift + CH- / |
|  Pause CD |  +  Shift + Pause / Step / |
|  Play CD |  +  Shift + Play / |
|  Stop CD |  +  Shift + Stop / |
|  << CD |  +  Shift + << / |
|  >> CD |  +  Shift + >> / |
|  I<< CD |  +  Shift + I<< / Preset- |
|  >>I CD |  +  Shift + >>I / Preset+ |
|  Random CD |  +  Shift + Blue / Prime Video / Random |

| Original | Replacement |
|--|---|
|  Repeat CD |  +  Shift + Green / APP / |
|  Display CD |  +  Shift + Display / Media |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | On |  | Power |
|  | Standby |  | Shift + Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
| | |  | Right |
| | |  | Down |
| | |  | Setup |
| | |  | Pause |
| | |  | Play |
| | |  | Stop |
| | |  | << |
| | |  | >> |
| | |  | Setup / OPT / |
| | |  | Pause / Step / Freeze |
| | |  | Play / Slow |
| | |  | Stop / Hold |
| | |  | << / Tune- |
| | |  | >> / Tune+ |

