


 


 


 







 

 








 

 

 

 

 
 
 
 
 


 

 



 

 










 









Original		Replacement		Original		Replacement	
	Power		Power		i		Info
	Source		AV		P +		Ch +
	1		1		P -		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back
	0		0		Exit		Exit
	TV		TV/R		World		Smart
	Recall		Pre Ch		Music/Camera/Ph		Media
	V +		Vol +		Guide		Guide
	V -		Vol -		Fav 1 / O		Shift + 1
	Mute		Mute		Fav 2 / Q		Shift + 2





Original	Replacement	Original	Replacement
 [=]/Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang	 Dual		
 Dialog	 Subt		
 -[O]-	 Options		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

