







 


 
 







 


 







 
 



 







 



 
 


 
 




 

 

 

 
 






 
 

 
 

 



 
 
 



 

 
 


Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<<
 TV Power	 Shift + Power	 Stop	 Stop
 TV Channel -	 Ch -	 Play / Pause	 Play
 TV Channel +	 Ch +	 Play / Pause	 Pause
 TV Volume -	 Shift + Vol -	 >>I	 >>I
 TV Volume +	 Shift + Vol +	 << / Tuning	 <<
 TV / Video	 TV/R	 >> / Tuning Up	 >>
 DVD	 Smart	 Up	 Up
 Tuner Band	 Shift + Smart	 Left	 Left
 Aux	 Media	 Enter	 Ok
 Title	 Info	 Right	 Right
 Menu	 Menu	 Down	 Down
 Audio Mo/St	 Dual	 Volume -	 Vol -
 Subtitle	 Subt	 Volume +	 Vol +
 Display	 Shift + Info	 DSP Mode	 List
 Return	 Back	 Effect	 3D
 Go To	 Guide	 Mute	 Mute





Original	Replacement
 Sleep	 Sleep
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 4 / PTY -	 Shift + Left
 5 / PTY Search	 5
 5 / PTY Search	 Shift + Ok
 6 / PTY +	 6
 6 / PTY +	 Shift + Right
 7	 7
 8	 8
 9	 9
 0	 0
 Sound Edit	 Red
 SPK Mode	 Green
 Pro Logic	 Yellow

Original	Replacement
 Test Tone	 Blue
 Slow	 Shift + Play
 Angle	 Format
 Setup	 Options
 TV System	 Eject
 DRC	 AV
 Clear	 Exit
 Repeat	 Text
 Repeat A-B	 Shift + Text
 Program	 Shift + Sleep
 Step	 Shift + Pause
 Remain	 Shift + Stop

