





 



 

 

 

 









 



























 
 

 

 

















 

 

 



 

 




 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	V.Format		Shift + Picture / Format
	Sleep		Sleep / Timer
	Text		Text / Goto
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[[≡]]		Smart / List
	0		0
	Recall		Back / Return
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Page Down		Shift + CH- /
	Down		Down
	Page Up		Shift + CH+ /
	FAV		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Info		Info / Angle





Original	Replacement
 ✓	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / Audio	 Yellow / YouTube / Repeat
 Yellow / Audio	 Audio / Lang I/II
 Blue / Subtitle	 Blue / Prime Video / Random
 Blue / Subtitle	 Subtitle / EQ
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 >[≡]	 Shift + Text /
 >	 Shift + Pause / Step /
 <<	 << / Tune-
 >>	 >> / Tune+
 Zoom	 Zoom / Size
 > <	 Shift + Stop /

Hold

Original	Replacement
 I<<	 I<< / Preset-
 >>	 >> / Preset+
 SAT	 Shift + 0
 Picture	 Picture / Format
 Book	 Setup / OPT /
 Book 2	 Shift + Setup / OPT / Tools

