
 













 




 



 
 






 
 







	Original	Replacement		Original	Replacement
			Power		Power
			Mute		Mute
			Pic Size		Format
			Pic Mode		Shift + Format
			Sleep		Sleep
			Dual I-II		Dual
			S.Mode		Shift + Dual
			Still		Pause
			1		1
			2		2
			3		3
			4		4
			5		5
			6		6
			7		7
			8		8
			9		9
			0		0
			-/--		Guide
			PRE-CH		Pre Ch
			S.Swap		I<<
			PIP		Options
			P.Input		>>
			P.Position		>>I
			P.Size		Subt
			P.Swap		<<
			TV		TV/R
			PC/HDMI		Media
			AV/Sel		Smart
			Source		AV
			Menu		Menu
			Exit		Exit
			TTX/On		Text
			Mix		Shift + Text





Original	Replacement
	 Up
	 Ch +
	 Down
	 Ch -
	 Right
	 Vol +
	 Left
	 Vol -
	 Ok
	 Red
	 Green
	 Yellow
	 Blue
	 Shift + Smart
	 List
	 Stop
	 Back

Original	Replacement
	 Info
	 Shift + AV
	 Eject
	 D. Menu

