




 

 

 
 
 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 SOS	 Sound / Title
 i / Info	 Info / Angle
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+

Original	Replacement
 Down / CH -	 CH- / Page-
 Down / CH -	 Down
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Menu	 Menu / Home
 EPG / Guide	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 USB - List	 Smart / List
 Page +	 Shift + CH+ /
 Image - Aspect Ratio	 Zoom / Size
 Page -	 Shift + CH- /
 USB - Media	 Display / Media
 GOTO	 Shift + Text /
 Image - HDMI RES	 Picture / Format



