
 



 

 

 



 

 

 


 



 









 

 

 

 
 
 



 



 
 









 

 

 

 

 
 
 


Original	Replacement	Original	Replacement
 System Standby	 Power	 Left	 Left
 Muting	 Mute / Dimmer	 Enter	 OK
 Play	 Play / Slow	 Right	 Right
 Pause	 Pause / Step / Freeze	 Down	 Down
 Stop	 Stop / Hold	 Recall	 Back / Return
 <<	 << / Tune-	 Master Vol+	 Vol+
 >>	 >> / Tune+	 Multi CH	 Smart / List
 I<</CH Preset-Tuner	 I<< / Preset-	 Tv CH+	 CH+ / Page+
 >>/CH Preset+ Tuner	 >> / Preset+	 Master Vol-	 Vol-
 Sound Field Mode	 Sound / Title	 Tv CH-	 CH- / Page-
 Sound Field	 Audio / Lang I/II	 1 Tuner	 1
 Sleep	 Sleep / Timer	 2 Tuner	 2
 Tv/Video/ANT	 TV/Radio /	 CD	 3
 DVD Menu	 D.Menu / Top	 4 Tuner	 4
 Standby AV	 AV / Input / RDS	 5 Tuner	 5
 Main Menu	 Menu / Home	 Tuner	 6
 Up	 Up	 7 Tuner	 7



 





 



 

 

 

 



 

 



 

 

 



 

 

 

 

 





 

 
 
 

 

 





Original	Replacement
 8 Tuner	 8
 9 Tuner	 9
 0 Tuner	 0
 -	 Fav / Marker / PC
 Video1	 Red / Netflix / Search
 Video 2	 Green / APP / Repeat
 <</CH/Preset-	 Shift + << / Preset-
 >> /CH/Preset+	 Shift + >> / Preset+
 Sound Field	 Shift + Sound / Title
 Test Tone	 Shift + Audio / Lang I/II
 D.Skip/TV/VTR	 Shift + TV/Radio / Program
 Top Menu	 Shift + D.Menu / Top Menu
 +	 Shift + Up
 < Menu	 Shift + Left
 Enter/D.Tuning/Return Tuner	 Shift + OK
 Menu >	 Shift + Right
 Tv Vol+	 Shift + Vol+

Original	Replacement
 Tv Vol-	 Shift + Vol-
 DVD/LD	 Shift + 2
 3 Tuner	 Shift + 3
 MD/Tape	 Shift + 5
 6 Tuner	 Shift + 6
 >10 Tuner/Shift/-/	 Shift + 0





Original		Replacement		Original		Replacement	
	Standby		Power		0		0
	Video 1		Shift + 1		Enter/D.Tuning/Return		OK
	Video 2		Shift + 2		I<<		I<< / Preset-
	DVD/LD		TV/Radio /		>>I		>>I / Preset+
	MD/Tape		Shift + 5		<<		<< / Tune-
	CD		Shift + 3		>>		>> / Tune+
	Tuner		Shift + 6		D.Skip/TV/VTR		D.Menu / Top
	1		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3		3		Stop		Stop / Hold
	4		4		Muting		Mute / Dimmer
	5		5		Master Vol+		Vol+
	6		6		Master Vol-		Vol-
	7		7				
	8		8				
	9		9				
	>10/Shift/-/-		Shift + 0				





Original	Replacement	Original	Replacement
 Standby CD	 Power	 5 Video 1	 Shift + 5
 Standby Video	 Shift + Power	 6 CD	 Shift + 6
 Video 1	 Shift + Smart / List	 6 Video 1	 6
 Video 2	 Shift + Display / Media	 7 CD	 7
 DVD/LD	 Shift + 2	 7 Video 1	 Shift + 7
 MD/Tape	 Shift + D.Menu / Top Menu	 8 CD	 Shift + 8
 CD	 TV/Radio /	 8 Video 1	 8
 Tuner	 Text / Goto	 9 CD	 Shift + 9
 1 CD	 Shift + 1	 9 Video 1	 9
 1 Video 1	 1	 >10/Shift/-/- CD	 Fav / Marker / PC
 2 CD	 Smart / List	 >10/Shift/-/- Video 1	 Shift + 0
 2 Video 1	 2	 0 CD	 Guide / EPG / -/-
 3 CD	 Shift + 3	 0 Video 1	 0
 3 Video 1	 3	 Enter/D.Tuning/Return CD	 Display / Media
 4 CD	 4	 Enter/D.Tuning/Return Video 1	 OK
 4 Video 1	 Shift + 4	 I<< CD	 I<< / Preset-
 5 CD	 5	 I<< Video 1	 Shift + I<< / Preset-


 


 

 





 


 


 
 

 


 




 
 

 

 






Original		Replacement		Original	Replacement
	>>I CD		>>I / Preset+		
	>>I Video 1		Shift + >>I / Preset+		
	<< CD		<< / Tune-		
	<< Video 1		Shift + << /		
	>> CD		>> / Tune+		
	>> Video 1		Shift + >> /		
	D.Skip/TV/VTR CD		D.Menu / Top		
	D.Skip/TV/VTR Video 1		Setup / OPT /		
	Play CD		Play / Slow		
	Play Video 1		Shift + Play /		
	Pause CD		Pause / Step / Freeze		
	Pause Video 1		Shift + Pause / Step /		
	Stop CD		Stop / Hold		
	Stop Video 1		Shift + Stop /		
	Muting		Mute / Dimmer		
	Master Vol+		Vol+		
	Master Vol-		Vol-		





Original		Replacement		Original		Replacement	
	Standby		Power		5 Video 2		5
	Standby Video		Shift + Power		6 MD/Tape		6
	Video 1		Shift + 1		6 Video 2		Shift + 6
	Video 2		Shift + 2		7 MD/Tape		7
	DVD/LD		Display / Media		7 Video 2		Shift + 7
	MD/Tape		Smart / List		8 MD/Tape		Shift + 8
	CD		Setup / OPT /		8 Video 2		8
	Tuner		TV/Radio /		9 MD/Tape		Shift + 9
	1 MD/Tape		Shift + Smart / List		9 Video 2		9
	1 Video 2		1		>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	2 MD/Tape		Shift + Display / Media		>10/Shift/-/- Video 2		Shift + 0
	2 Video 2		2		0 MD/Tape		Fav / Marker / PC
	3 MD/Tape		Shift + 3		0 Video 2		0
	3 Video 2		3		Enter/D.Tuning/Return MD/Tape		Shift + OK
	4 MD/Tape		4		Enter/D.Tuning/Return Video 2		OK
	4 Video 2		Shift + 4		I<< MD/Tape		I<< / Preset-
	5 MD/Tape		Shift + 5		I<< Video 2		Shift + I<< / Preset-





Original	Replacement	Original	Replacement
>>I MD/Tape	>>I / Preset+		
>>I Video 2	+ Shift + >>I / Preset+		
<< MD/Tape	<< / Tune-		
<< Video 2	+ Shift + << /		
>> MD/Tape	>> / Tune+		
>> Video 2	+ Shift + >> /		
D.Skip/TV/VTR MD/Tape	D.Menu / Top		
D.Skip/TV/VTR Video 2	+ Shift + D.Menu / Top Menu		
Play MD/Tape	Play / Slow		
Play Video 2	+ Shift + Play /		
Pause MD/Tape	Pause / Step / Freeze		
Pause Video 2	+ Shift + Pause / Step /		
Stop MD/Tape	Stop / Hold		
Stop Video 2	+ Shift + Stop /		
Muting	Mute / Dimmer		
Master Vol+	Vol+		
Master Vol-	Vol-		

