



Original	Replacement
Standby/On	Power
Eject	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Dimmer	Guide
Sleep	Sleep
Bass	Green
Treble	Blue
Night	Exit

Original	Replacement
Repeat/Freq/Text	Text
Prog	Shift + Sleep
A-B	Pre Ch
Stop	Stop
Pause/PTY Seek	Pause
Shuffle/PTY Seek Start	TV/R
I<</Preset	I<<
Play	Play
>>/Preset Up	>>I
Menu	Menu
On Screen	3D
Set Up	Options
Top	Back
Up	Up
Down	Down
Right	Right
Left	Left





 

 


 

 



 
 



 




Original	Replacement	Original	Replacement
 Enter	 Ok		
 Area	 Info		
 Enhancer	 AV		
 Mode	 D. Menu		
 Direct	 Red		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		
 Surround	 List		
 AUX	 Media		
 USB	 Smart		
 Subtitle	 Subt		
 Angle	 Format		
 Zoom	 Shift + Eject		
 Audio	 Dual		





Original	Replacement
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat/Freq/Text	 Text
 Prog	 Sleep
 Stop	 Stop
 Pause/PTY Seek	 Pause
 Shuffle/PTY Seek Start	 TV/R
 I<</Preset	 I<<

Original	Replacement
 >>I/Preset Up	 >>I
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left



Down