


 



 
 

 

 

 

 
 

 


 










 
 
 



	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Shift + Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Format
	Tv Menu		Menu		Eject
	Source		AV		Tv/Radio
	ChList		List		Text





Original	Replacement
 Epg	 Guide
 Fav	 Pre Ch
 Info	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Reveal	 Media
 Hold	 D. Menu
 Index	 Shift + Info
 Subpage	 Shift + AV
 List	 Smart
 Mix	 Options
 Subtitle	 Subt
 Size	 3D
 <<	 <<
 >>	 >>

Original	Replacement
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec/Rep	 Rec

