










 

 



 














 






 

 








 

 

 

 

 












| Original | Replacement |
|--|---|
|  Power DVD |  Power |
|  Direct Tv Rec |  TV/R |
|  DVD |  Smart |
|  SD/PC |  Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  */Cancel |  Guide |
|  Input Select |  AV |
|  CH+ |  Ch + |

| Original | Replacement |
|--|---|
|  CH- |  Ch - |
|  ShowView |  Blue |
|  Manual Skip |  Subt |
|  I<< Skip |  I<< |
|  >>I Skip |  >>I |
|  << Slow/Search |  << |
|  Slow/Search >> |  >> |
|  Stop |  Stop |
|  Pause |  Pause |
|  Play |  Play |
|  Direct Navigator/Top |  Menu |
|  Function |  Options |
|  Sub Menu |  D. Menu |
|  Return |  Back |
|  Up |  Up |
|  Down |  Down |
|  Right/II> |  Right |





| Original | Replacement |
|------------------|---------------|
| <II/Left | Left |
| Enter | Ok |
| Prog/Check | Sleep |
| Display | Info |
| Status | 3D |
| Time Slip | Format |
| Timer | Shift + AV |
| Erase | Exit |
| Rec Mode | Shift + Rec |
| Rec | Rec |
| A/Ext Link | Red |
| B | Green |
| C/Create Chapter | Yellow |
| Audio | Dual |
| Power Tv | Shift + Power |
| AV Tv | Eject |
| CH+ Tv | Shift + Ch + |

| Original | Replacement |
|------------|--------------|
| CH- Tv | Shift + Ch - |
| Volume+ Tv | Vol + |
| Volume- Tv | Vol - |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

