

 





 





























 
 














 







 

 







Original	Replacement	Original	Replacement
 Power	 Power	 V.Menu	 D.Menu / Top
 Input	 AV / Input / RDS	 Menu	 Menu / Home
 Display	 Display / Media	 Vol -	 Vol-
 P.STD	 Picture / Format	 P +	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol +	 Vol+
 1	 1	 P -	 CH- / Page-
 2	 2	 << REW	 << / Tune-
 3	 3	 Stop	 Stop / Hold
 4	 4	 Play	 Play / Slow
 5	 5	 >> FF	 >> / Tune+
 6	 6	 Rec	 Rec / Rec Mode
 7	 7	 Eject	 Eject / Surround
 8	 8	 Pause / P/S	 Pause / Step / Freeze
 9	 9	 Crystal PB	 Smart / List
 -/--	 Guide / EPG / -/--	 TRK Up	 >> / Preset+
 0	 0	 TRK Up	 Up
 Pre-CH	 Back / Return	 Index	 Info / Angle





Original		Replacement		Original		Replacement	
	Memory		OK				
	Sleep		Sleep / Timer				
	TRK Down		Down				
	TRK Down		I<< / Preset-				
	Lang Sel		Audio / Lang I/II				
	Clear		Exit / Cancel / Clear				

