 









Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Display		Info
	Exit		Exit
	TV / AV		AV
	SYS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Original	Replacement	Original	Replacement
	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	SMode		Format
	PMode		Shift + Dual
	Sleep		Sleep
	Nicam		Dual
	Hold		Stop
	Index		Media





Original	Replacement
PGUP	SHIFT + CH Shift + Ch +
SIZE	ZOOM Eject
PGDN	SHIFT + CH Shift + Ch -
TEXT	REPEAT TEXT Text
REVEAL	SETTINGS OPT Options
SUBPAGE	AD SUBT Subt
RED	A Red
GREEN	B Green
YELLOW	C Yellow
BLUE	D Blue

Original	Replacement

