



Original	Replacement	Original	Replacement
	Power		Mute / Dimmer
	1		CH- / Page-
	2		Menu / Home
	3		Exit / Cancel / Clear
	4		Up
	5		Left
	6		OK
	7		Right
	8		Guide / Top
	9		Down
	Recall		Tv/FAV/Radio/Set
	0		Tv/FAV/Radio/Set
	Source		Red / Netflix / Search
	Vol+		Green / APP / Repeat
	A/D/Content Menu		Yellow / YouTube / Repeat
	P+		Blue / Prime Video / Random
	Vol-		Picture / Format



































 



















 

 

 

 











Original	Replacement	Original	Replacement
	←[/]→		
	[i+]/[≡i]		
	Text		
	Audio		
	Subtitle		
	Eject		
	O)/I/I		
	Stop		
	Play/[≡o]		
	II/II>/[▼]		
	I<</[≡?]		
	<</[≡+]		
	>>/[≡ ]		
	>>I/[O]/[≡X]		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		D.Menu / Top
	Down		Down
	Tv/FAV/Radio/Set		Setup / OPT /
	[<>]		Picture / Format
	<[/]>		Display / Media
	[i+]/[≡i]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	O/I/II		Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Play/[≡o]		Play / Slow











 







 

















 











 






 






 









Original	Replacement	Original	Replacement
II/II>/[▽]	II Pause / Step / Freeze		
I<</[≡?]	I<< / Preset-		
<</[≡+]	<< / Tune-		
>>/[≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Shift + Back / Return
 4	 4	 Exit/Return	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Guide/Top	 D.Menu / Top
 Recall	 Back / Return	 Down	 Down
 0	 0	 Tv/FAV/Radio/Set	 TV/Radio /
 Source	 AV / Input / RDS	 Tv/FAV/Radio/Set	 Setup / OPT /
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 A/D / Content	 Smart / List	 Green	 Green / APP / Repeat
 P+	 CH+ / Page+	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
 [ <> ]	 Picture / Format		
 ←[ / ]→	 Display / Media		
 [i+]/[≡i]	 Info / Angle		
 Text	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Eject	 Eject / Surround		
 O)I/II	 Shift + Audio / Lang I/II		
 Stop	 Stop / Hold		
 Play/[≡o]	 Play / Slow		
 II/II>/[▼]	 Pause / Step / Freeze		
 I<</[≡?]	 I<< / Preset-		
 <</[≡+]	 << / Tune-		
 >>/[≡◇]	 >> / Tune+		
 >>I/[O]/[≡X]	 >>I / Preset+		

