 


 


 
 
 
 




 

 

 

 

 
 
 




 




 
 
 
 
 
 
 

 

 

 
 
 

 

 




 
 



 









Original		Replacement		Original		Replacement	
	On/Standby		Power		1 Receiver		1
	Display		Info		2 Receiver		2
	Enter Receiver		Ok		3 Receiver		3
	Up Receiver		Up		4 Receiver		4
	Down Receiver		Down		5 Receiver		5
	Right Receiver		Right		6 Receiver		6
	Left Receiver		Left		7 Receiver		7
	Return Receiver		Back		8 Receiver		8
	Setup Receiver		Smart		9 Receiver		9
	Home/Audio		Media		0/11 Receiver		0
	Play Receiver		Play		+10/--/---10/Dimmer/D.Tun Receiver		Shift + Guide
	I<< Receiver		I<<		CLR/Sleep/12 Receiver		Pre Ch
	>>I Receiver		>>I		Movie Tv/Search Receiver		Red
	<< Receiver		<<		Music/Repeat Receiver		Green
	>> Receiver		>>		Game/Random Receiver		Yellow
	Pause/Play reverse Receiver		Pause		THX / Play Mode Receiver		Blue
	Stop Receiver		Stop		Muting Receiver		Mute





Original	Replacement	Original	Replacement
 Vol+ Receiver	 Vol +	 Movie/TV/Search	 Options
 Vol- Receiver	 Vol -	 Music/Repeat	 Dual
 CH/Disc/Album+ Receiver	 Ch +	 Game/Random	 Subt
 CH/Disc/Album- Receiver	 Ch -	 Stereo/Play Mode	 TV/R
 Power Tv	 Shift + Power	 1 Tv	 Shift + 1
 Input Tv	 AV	 2 Tv	 Shift + 2
 CH+ Tv	 Shift + Ch +	 3 Tv	 Shift + 3
 CH- Tv	 Shift + Ch -	 4 Tv	 Shift + 4
 Up Tv	 Shift + Up	 5 Tv	 Shift + 5
 Enter Tv	 Shift + Ok	 6 Tv	 Shift + 6
 Down Tv	 Shift + Down	 7 Tv	 Shift + 7
 Right Tv	 Shift + Right	 8 Tv	 Shift + 8
 Left Tv	 Shift + Left	 9 Tv	 Shift + 9
 Menu/Prev CH	 Menu	 0/11 Tv	 Shift + 0
 Guide/Top Menu	 Shift + Menu	 +10/--/-10 Tv	 Guide
 Return Tv	 Shift + Back	 CLR/Sleep/12	 Shift + Pre Ch
 Setup Tv	 Shift + Smart	 Vol+ Tv	 Shift + Dual



 




 
 


 


 
 
 

 
 
 

 

 
 

 
 





 



 



 



 

 

 

 
 
 


 

 




 







Original	Replacement
Vol- Tv	Shift + Options
AUX	Text
TV / CD	Format
CBL/SAT	3D
PORT	Shift + Media
TUNER	Shift + Subt
DVD / BD	Shift + Text
Game	Shift + TV/R
VCR / DVR	Shift + AV
PC	Shift + Format

Original	Replacement





Original		Replacement		Original		Replacement	
	Power BD/DVD		Power		Stop BD/DVD		Stop
	Menu/Prev CH		Menu		Movie Tv/Search BD/DVD		Red
	Top Menu/Guide BD/DVD		Options		Music/Repeat		Green
	Setup BD/DVD		Smart		Game/Random		Yellow
	Return BD/DVD		Back		Stereo/Play Mode BD/DVD		Blue
	Audio BD/DVD		Media		1 BD/DVD		1
	Enter BD/DVD		Ok		2 BD/DVD		2
	Up BD/DVD		Up		3 BD/DVD		3
	Down BD/DVD		Down		4 BD/DVD		4
	Right BD/DVD		Right		5 BD/DVD		5
	Left BD/DVD		Left		6 BD/DVD		6
	I<< BD/DVD		I<<		7 BD/DVD		7
	>>I BD/DVD		>>I		8 BD/DVD		8
	<< BD/DVD		<<		9 BD/DVD		9
	>> BD/DVD		>>		0/11 BD/DVD		0
	Play BD/DVD		Play		+10/-/-10/D.Tun/Dimmer BD/DVD		Guide
	Pause/Play rev. BD/DVD		Pause		CLR/Sleep/12		Pre Ch




 
 
 

 

 



 


 

 

 

 
 
 

 

 
 
 



 
 
BD/DVD



Original	Replacement	Original	Replacement
 CBL/SAT	 Text	 Stop CBL/SAT	 Shift + Stop
 Muting Receiver	 Mute	 << CBL/SAT	 Shift + Ch -
 Vol+ Receiver	 Vol +	 >> CBL/SAT	 Shift + Ch +
 Vol- Receiver	 Vol -	 Play CBL/SAT	 3D
 Power CBL/SAT	 Shift + Power	 Movie Tv/Search CBL/SAT	 Dual
 CH Disc/Album+ CBL/SAT	 Ch +	 Music/Repeat CBL/SAT	 Subt
 CH Disc/Album- CBL/SAT	 Ch -	 Game/Random	 AV
 Menu/Prev CH CBL/SAT	 Shift + Menu	 Stereo/Play Mode CBL/SAT	 Format
 Top Menu/Guide CBL/SAT	 Shift + Options	 1 CBL/SAT	 Shift + 1
 Return CBL/SAT	 Shift + Back	 2 CBL/SAT	 Shift + 2
 Setup CBL/SAT	 Shift + Smart	 3 CBL/SAT	 Shift + 3
 Up CBL/SAT	 Shift + Up	 4 CBL/SAT	 Shift + 4
 Enter CBL/SAT	 Shift + Ok	 5 CBL/SAT	 Shift + 5
 Down CBL/SAT	 Shift + Down	 6 CBL/SAT	 Shift + 6
 Right CBL/SAT	 Shift + Right	 7 CBL/SAT	 Shift + 7
 Left CBL/SAT	 Shift + Left	 8 CBL/SAT	 Shift + 8
 Pause/Play rev. CBL/SAT	 Shift + Pause	 9 CBL/SAT	 Shift + 9





Original		Replacement		Original		Replacement	
	Power CD		Power		Stop CD		Stop
	CH/Disc+ CD		Ch +		Movie Tv/Search		Red
	CH/Disc- CD		Ch -		Music/Repeat		Green
	Return CD		Back		Game/Random		Yellow
	Setup CD		Smart		Stereo/Play Mode		Blue
	Audio CD		Media		1 CD		1
	Up CD		Up		2 CD		2
	Down CD		Down		3 CD		3
	Right CD		Right		4 CD		4
	Left CD		Left		5 CD		5
	Enter CD		Ok		6 CD		6
	I<< CD		I<<		7 CD		7
	>>I CD		>>I		8 CD		8
	<< CD		<<		9 CD		9
	>> CD		>>		0/11 CD		0
	Play CD		Play		+10/--10/D.Tun/ Dimmer CD		Guide
	Pause CD		Pause		CLR/Sleep/12		Pre Ch



 


 
 
 




 







 






 
 




 


 
 

 

 


 
 
 

 
 


 
 
 
 

 

 

 




 

 
CD



Original	Replacement	Original	Replacement
Muting Receiver	Mute		
Vol+ Receiver	Vol +		
Vol- Receiver	Vol -		
TV/CD	TV/R		





Original	Replacement	Original	Replacement
 Power Receiver Zone 2	 Power	 >> Zone 2	 >>
 Muting Receiver	 Mute	 << Zone 2	 <<
 Vol+ Zone 2	 Vol +	 Pause Zone 2	 Pause
 Vol- Zone 2	 Vol -	 Stop Zone 2	 Stop
 CH Disc/Album+ Zone 2	 Ch +	 Movie Tv/Search Zone 2	 Red
 CH Disc/Album- Zone 2	 Ch -	 Music/Repeat	 Green
 Up Zone 2	 Up	 Game/Random	 Yellow
 Enter Zone 2	 Ok	 Stereo/Play Mode Zone 2	 Blue
 Down Zone 2	 Down	 1 Zone 2	 1
 Right Zone 2	 Right	 2 Zone 2	 2
 Left Zone 2	 Left	 3 Zone 2	 3
 Return Zone 2	 Back	 4 Zone 2	 4
 Setup Zone 2	 Smart	 5 Zone 2	 5
 Audio Zone 2	 Media	 6 Zone 2	 6
 I<< Zone 2	 I<<	 7 Zone 2	 7
 >>I Zone 2	 >>I	 8 Zone 2	 8
 Play Zone 2	 Play	 9 Zone 2	 9





Original	Replacement	Original	Replacement
0/11 Zone 2	0		
+10/--/--10/D.Tun/Dimmer Zone 2	GUIDE		
CLR/Sleep/12	PRE-Ch		

