

















 


























 











Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Search	 Display / Media
 Subtitle	 Subtitle / EQ
 *	 D.Menu / Top
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 ...	 Fav / Marker / PC
 Vol+	 Vol+
 AD	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 Prime Video	 Shift + Blue / Prime
 Back	 Back / Return
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right





Original	Replacement
Text	Text / Goto
Down	Down
T.Opt	Setup / OPT /
Movies	Picture / Format
Rec	Rec / Rec Mode
Stop	Stop / Hold
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

