

 











 











 









 













 













 







Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Video		Shift + 4		10+		Guide / EPG / -/-
	Mute		Mute / Dimmer		Goto		Text / Goto
	Open / Close		Eject / Surround		<<		<< / Tune-
	USB		Shift + 8		Vol -		Vol-
	Prog		TV/Radio /		Vol +		Vol+
	Mark		Fav / Marker / PC		I<<		I<< / Preset-
	Clear		Exit / Cancel / Clear		Play / Pause		Play / Slow
	1		1		Stop		Stop / Hold
	2		2		>>		>> / Tune+
	3		3		Repeat		Green / APP / Repeat
	4		4		A-B		Yellow / YouTube / Repeat
	5		5		>>I		>>I / Preset+
	6		6		Menu / Ripping		Menu / Home
	7		7		Up		Up
	8		8		Setup		Setup / OPT /
	9		9		Left		Left





Original	Replacement	Original	Replacement
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	OSD		Display / Media
	Zoom		Zoom / Size
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	Step		Pause / Step / Freeze
	Slow	+	Shift + Play /
	Return		Back / Return
	Default		D.Menu / Top

