



































Original	Replacement	Original	Replacement
Power	 Power	Track/Preset/Chapter-	 CH- / Page-
Mute	 Mute / Dimmer	1	 1
Play	 Play / Slow	2	 2
Pause	 Pause / Step / Freeze	3	 3
Stop	 Stop / Hold	4	 4
<<	 << / Tune-	5	 5
>>	 >> / Tune+	6	 6
DVD Menu	 D.Menu / Top	7	 7
Settings	 Setup / OPT /	8	 8
Seek Left	 Left	9	 9
Enter	 OK	0	 0
Seek Right	 Right	Repeat	 Green / APP / Repeat
Vol+	 Vol+	Video1	 Yellow / YouTube / Repeat
AM	 Smart / List	Shuffle	 Blue / Prime Video / Random
Track/Preset/Chapter+	 CH+ / Page+	Tune Down	 Shift + << /
Vol-	 Vol-	Tune Up	 Shift + >> /
FM	 Display / Media	DVD Menu	 Shift + D.Menu / Top Menu



