 
 
 
 

 


 
 
 
 

 

 


 

 



 



Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Smart
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Display	 Info
 3	 3	 TV / Radio	 TV/R
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Right	 Right
 8	 8	 OK / CH List	 Ok
 9	 9	 OK / CH List	 List
 0	 0	 Menu	 Menu
 -/--	 Guide	 Exit	 Exit
 Recall	 Back	 Source	 AV
 Vol+	 Vol +	 P.Mode	 Shift + Format
 Vol-	 Vol -	 S.Mode	 Shift + Dual
 Rec	 Rec	 Sleep	 Sleep





Original	Replacement
 Text	 Text
 Hold	 Shift + Stop
 Index	 D. Menu
 Size	 Eject
 FAV	 Pre Ch
 Subpage	 Shift + Subt
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Audio	 Dual
 Stop	 Stop
 Reveal	 Media
 Aspect	 Format
 Subtitle	 Subt
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I

Original	Replacement
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

