










 



 






Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	1		1		P-		Ch -
	2		2		Home		Smart
	3		3		G		Guide
	4		4		i		Info
	5		5		Back		Back
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Lang		Dual		OK		Ok
	TXT		Text		Netflix		Media
	Vol+		Vol +		YouTube		Shift + Media
	Vol-		Vol -		*1		Format
	Mute		Mute		Prime Video		Shift + Smart
	Source		AV		Red		Red





Original	Replacement	Original	Replacement
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Original	Replacement

